



## WD TV<sup>®</sup> Mini<sup>™</sup> Media Player Firmware Release Notes

---

These release notes provide information on the latest posting of firmware for the [WD TV Mini Media Player](#).

These release notes provide information on the following:

- [Version 1.00.60](#)



---

## Version 1.00.60:

### Resolved Issues:

- Added user interface language support for: Czech, Hungarian, Romanian, Slovak, Slovenian, Ukrainian, Bulgarian, Bosnian, Croatian, Polish, Albanian and Serbian.
- Added UTF-16 subtitle support.
- Resolved the problem with copying file into HFS+ partition's HDD.
- Resolved various multi-language text and filename issues.
- Resolved Hindi ANSI subtitle not being displayed with "Hindi" settings.
- Resolved unable to copy file in 1 partition USB device.
- Resolved not seeing subtitle file in file management.
- Resolved unlock feature failing to unlock a locked WD drive.
- Resolved file named with Hindi and Thai not being displayed normally.
- Resolved MKA audio files playing for 2 seconds then skipping to the next song.
- Resolved the problem with previous subtitle remaining displayed.
- Resolved USB drive not spinning down when ejected.
- Resolved subtitle alignment issues.
- Resolved subtitles not being displayed for some ISO videos.



---

## Installing the Firmware Update

Firmware is an important set of instructions that tells your WD TV Mini Media Player how to operate and what the interactive screens look like, as well as ensures accurate functionality. Updating the firmware is important because WD continues to develop newer, faster, and more efficient tools that enhance your WD TV Mini Media Player's capabilities and promotes ease of use.



**Important:** Make sure the WD TV Mini Media Player's AC power adapter remains connected during the firmware update. A power disruption during the update process can corrupt the system firmware. Also, make sure that you do not unplug the USB storage device

---

### To update the firmware via a USB device:

1. Go to <http://support.wdc.com> to download the latest firmware update compressed file for your WD TV Mini Media Player.
2. Click "Downloads" then the product name (or photo).
3. Extract the "WDTV\_mini.IMG" to the root (top level) of a portable USB drive.
4. Connect the USB drive to the WD TV Mini Media Player's USB port.
5. Press HOME, and then select the Settings bar.
6. Select the firmware upgrade icon, and then press ENTER.
7. You are prompted to perform the firmware upgrade.
8. Select OK on the firmware update prompt, and then press ENTER. This will restart the system.
9. After restarting, the system automatically enters firmware upgrade mode.
10. Once the update process is completed, the WD TV Mini Media Player will restart again.
11. Once the WD TV Mini Media Player restarts, the new firmware is automatically loaded.

### Important product update notes:

Make sure that the only USB drive connected to the WD TV Mini Media Player contains the product update files.

